



# Sony Alpha A3000 Motherboard Replacement

Step by step instructions for replacing the motherboard which is attached to the memory card dock.

Written By: Leonard Holloman



## INTRODUCTION

This guide provided instruction on removing the motherboard and should only be followed if a compatible replacement is available or subsequent repair procedures require its removal.

---



### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-


## Step 1 — Rear Case



- Remove the seven highlighted screws shown here.

⚠ Screws are teeny tiny, don't lose them!



## Step 2

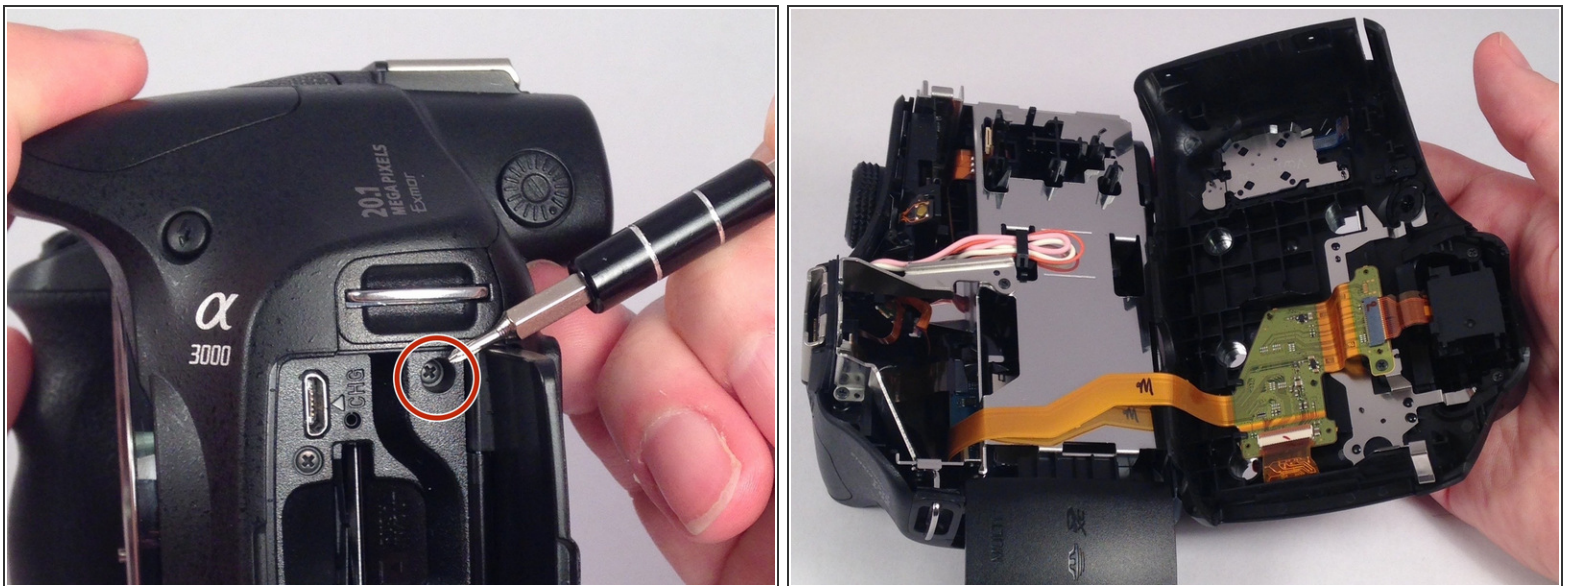

- Remove this final screw from the memory card compartment.
- Remove the chassis by pulling the back cover away from the camera.



## Step 3

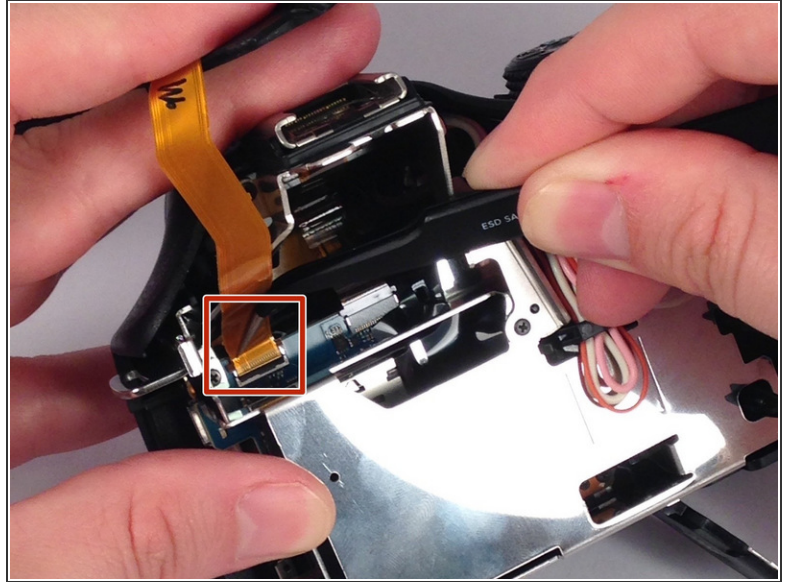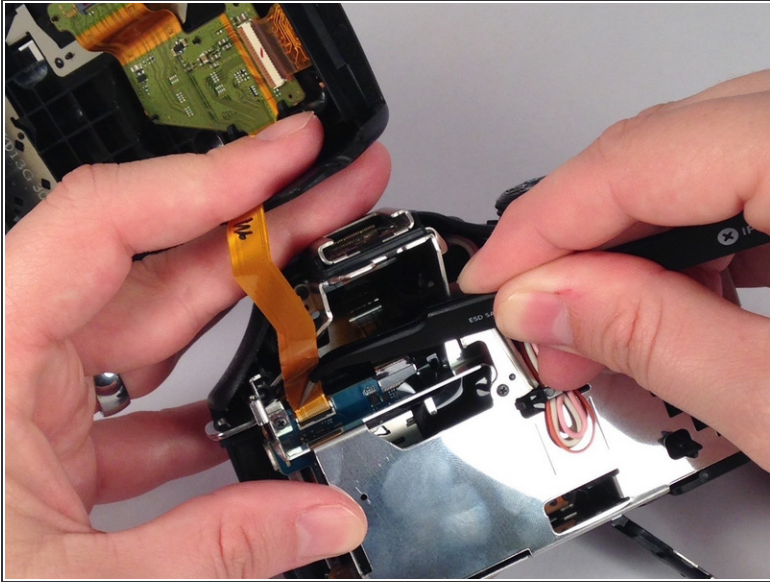

- Gently but forcefully lift up on the parallel cable connecting the two halves of the camera.



## Step 4 — Motherboard



- After removing the backing from the camera. Remove the two final screws in the memory compartment area.
- Detach the facing for the memory dock.




## Step 5

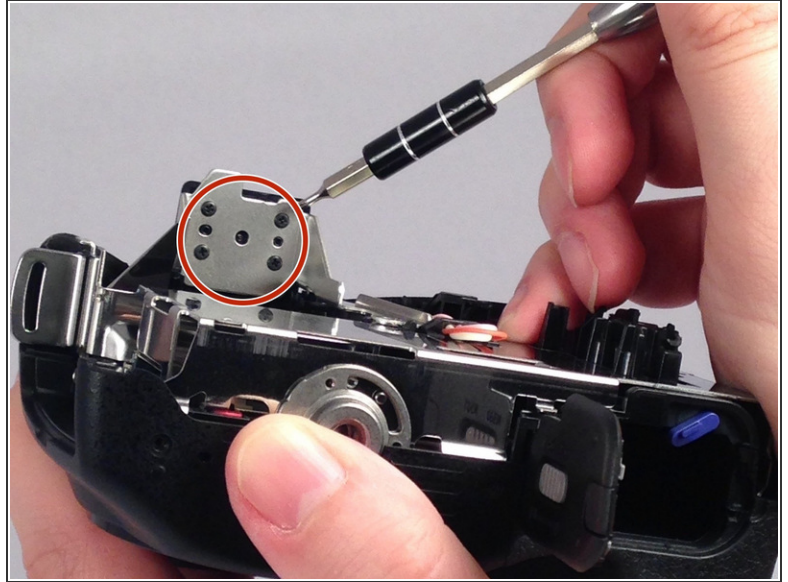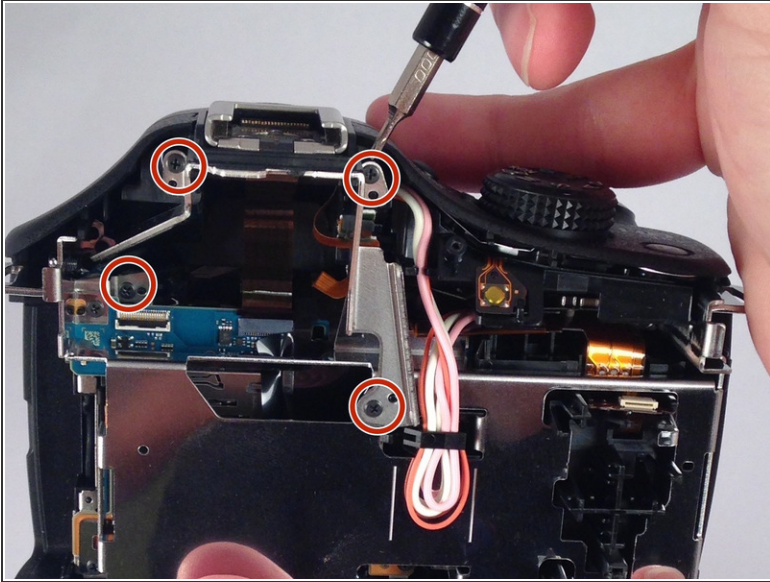


- Remove the eight screws securing the mount for the flash device.

## Step 6

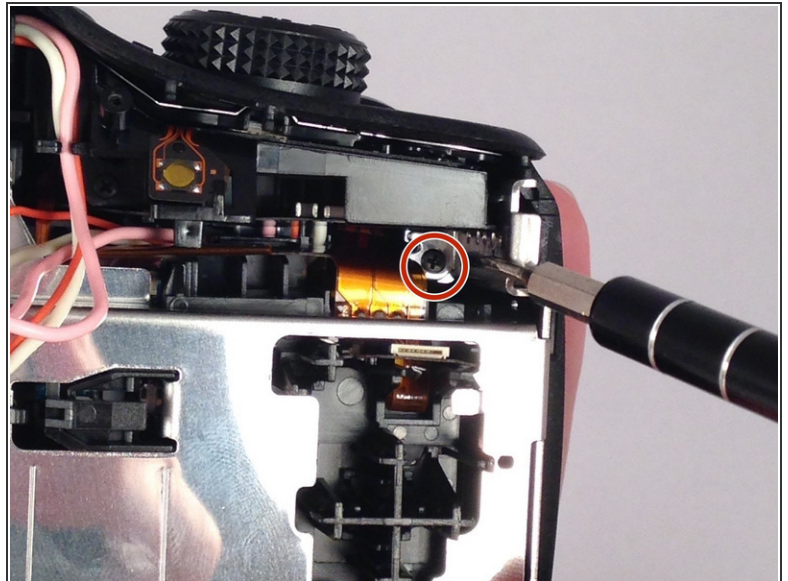


- Remove the three remaining screws holding in the protective metal casing.

## Step 7

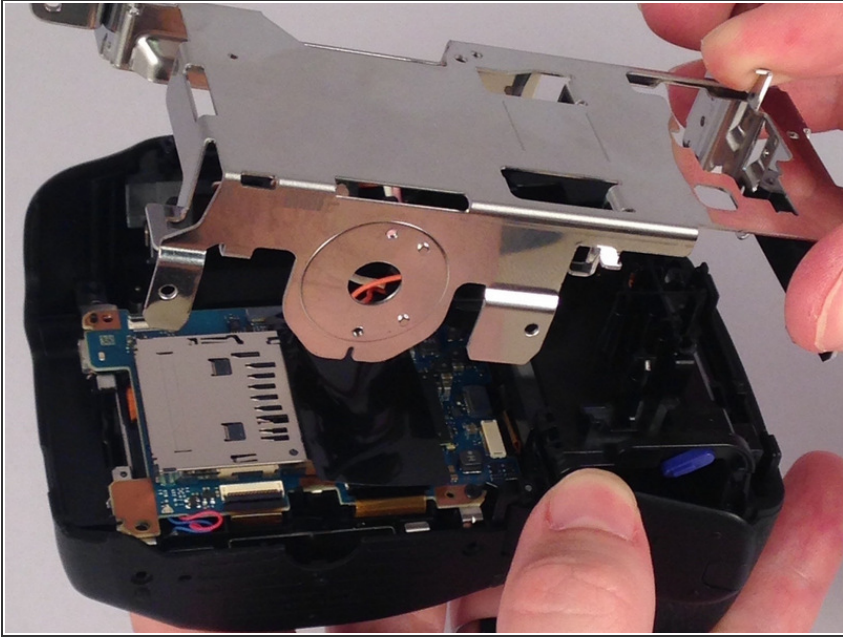

- Remove the metal casing.


## Step 8

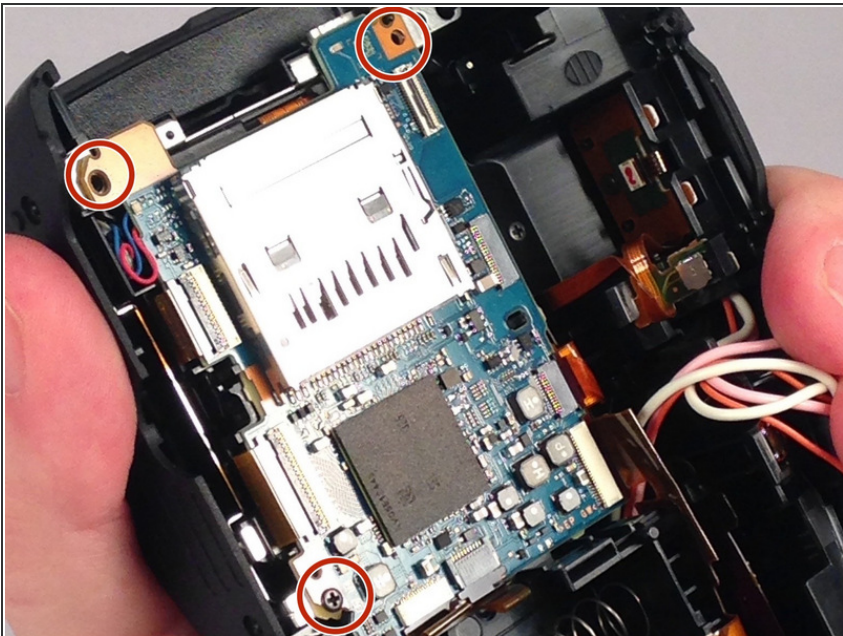

- Remove three screws holding down the motherboard .




## Step 9

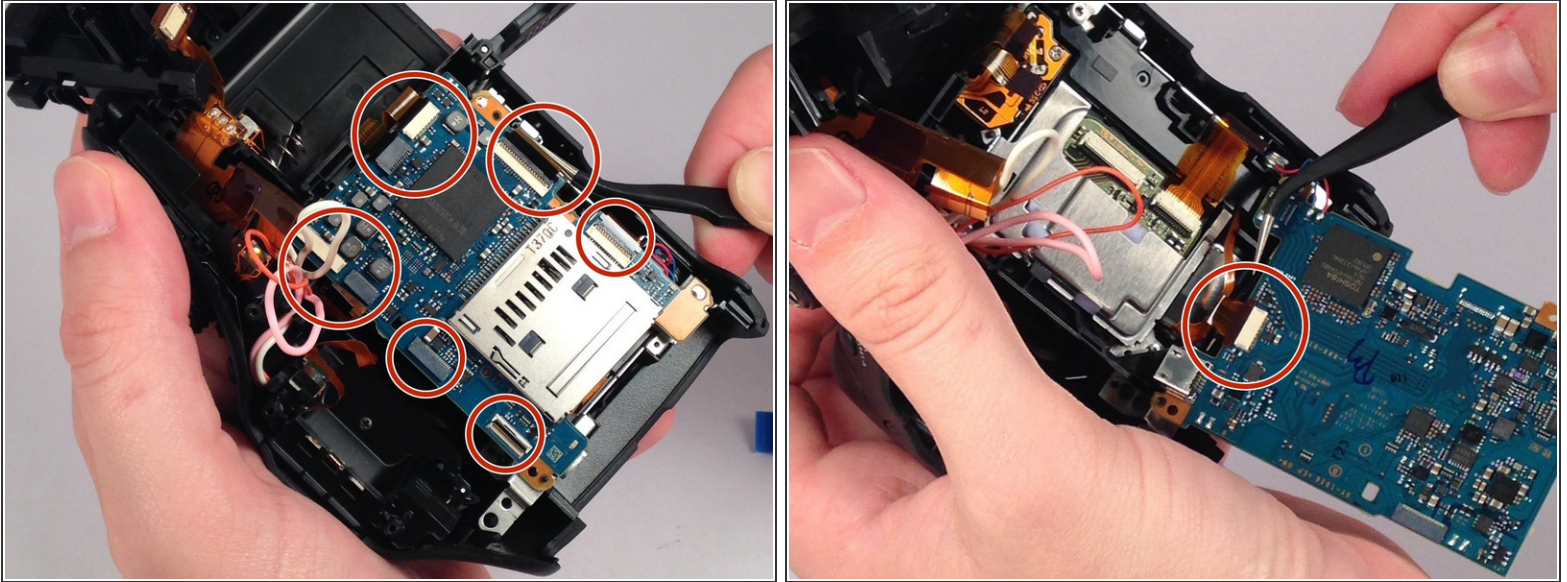

- Detach the nine serial cables connecting it to the camera body.

## Step 10

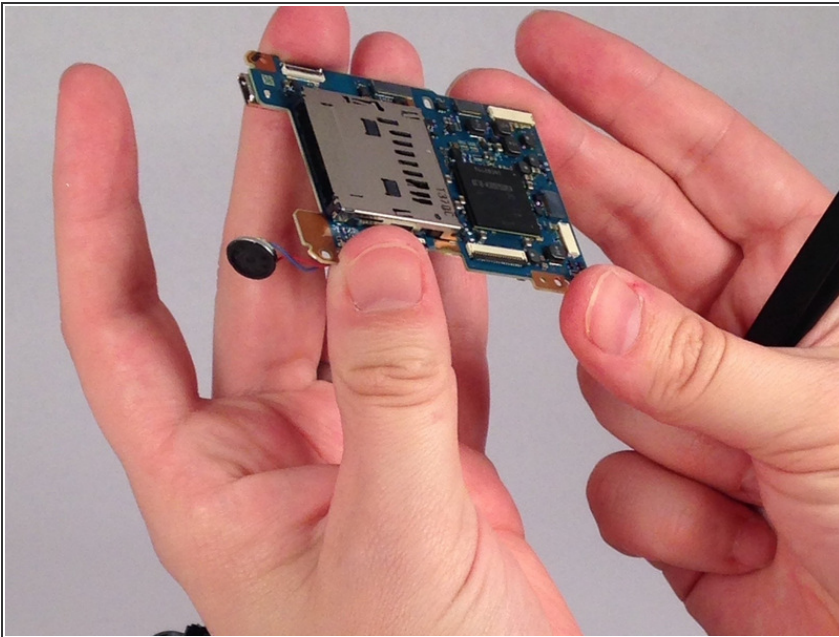

- Finally remove the motherboard from the casing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-08 05:50:01 AM.

